


How to Adjust

(1) Adjustment of Straight Key

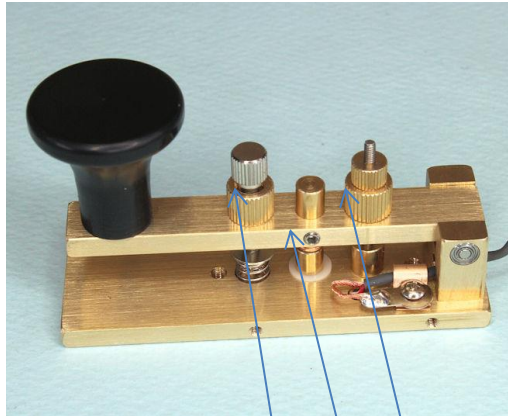


A B C

"A" for Spring Tension adjustment
"B" for leveling the lever and the base in parallel when contact closed.
"C" for contact gap adjustment
(after adjustment, tighten the locknut of "A" & "C")

Adjustment of "A", "C" can be done without removing the dust cover.

(2) Adjustment of Paddle

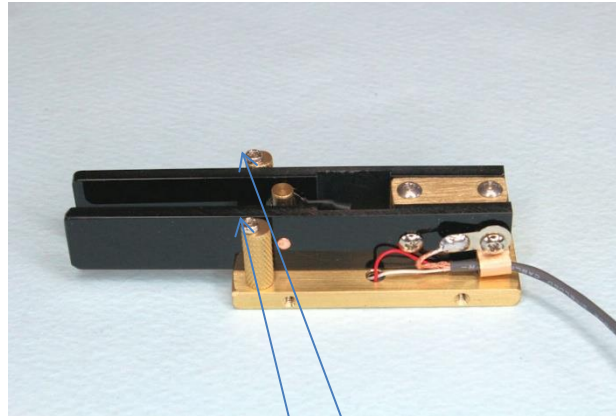

D E

Remove the dust cover,
"D", "E" for contact gap adjustment for right & left respectively.
Untighten the screw on "D", then rotate the decenter post to adjust gap.
After adjustment of gap, tighten the screw "D"
Same on "E"

Please note that there is no tension adjustment on this paddle.
The tension is fixed as very light & it's practical for QRQ operation.
If you want harder tension,
please add spring or magnet in between the levers by yourself.