



Treatment of Accessories (cable & rubber sheet)


Straight Key

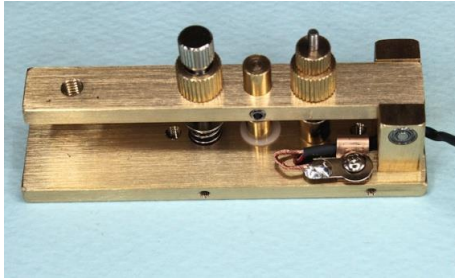

(1) Remove the dust cover, draw the cable via the thru-hole on rear side of the key. Then solder the ground core to the earth lug terminal.

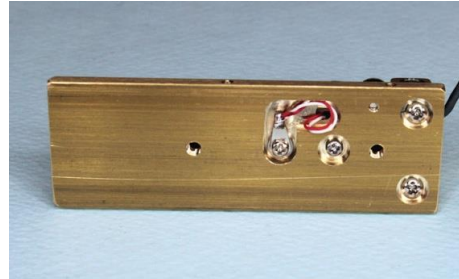


(2) Solder the center cores (red&white) on the terminal located at the groove of bottom side.

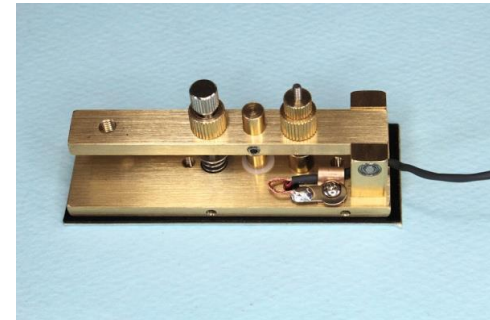


(3) Remove the protect sheet on adhesive side stick it on the bottom of key while keeping the position of fixing screws. Then, cut excess part of rubber carefully.


Paddle

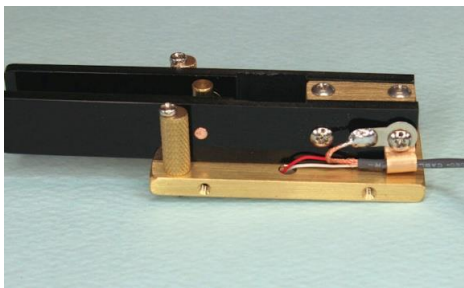

(4) Fix the cable by code clamp as shown. Then, through red & white cable into the thru-hole of the base.

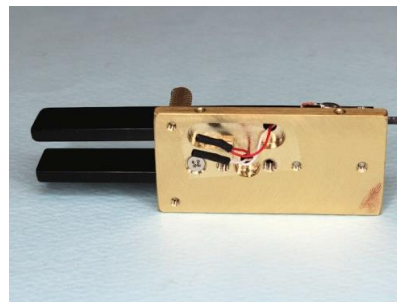

(5) Solder the red & white cable respectively with the same colored cable located in the bottom groove.
NOTE: before soldering, heatshrinkable tube must be placed on each cable. And heat them

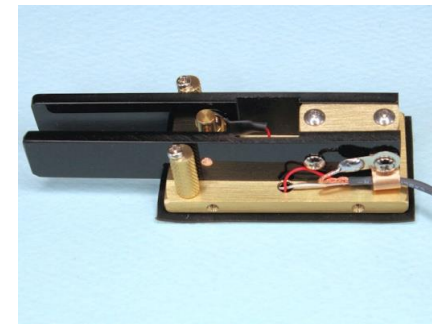

(6) Treatment of rubber sheet is same with those for the straight key.